




OCE PLOTWAVE 345

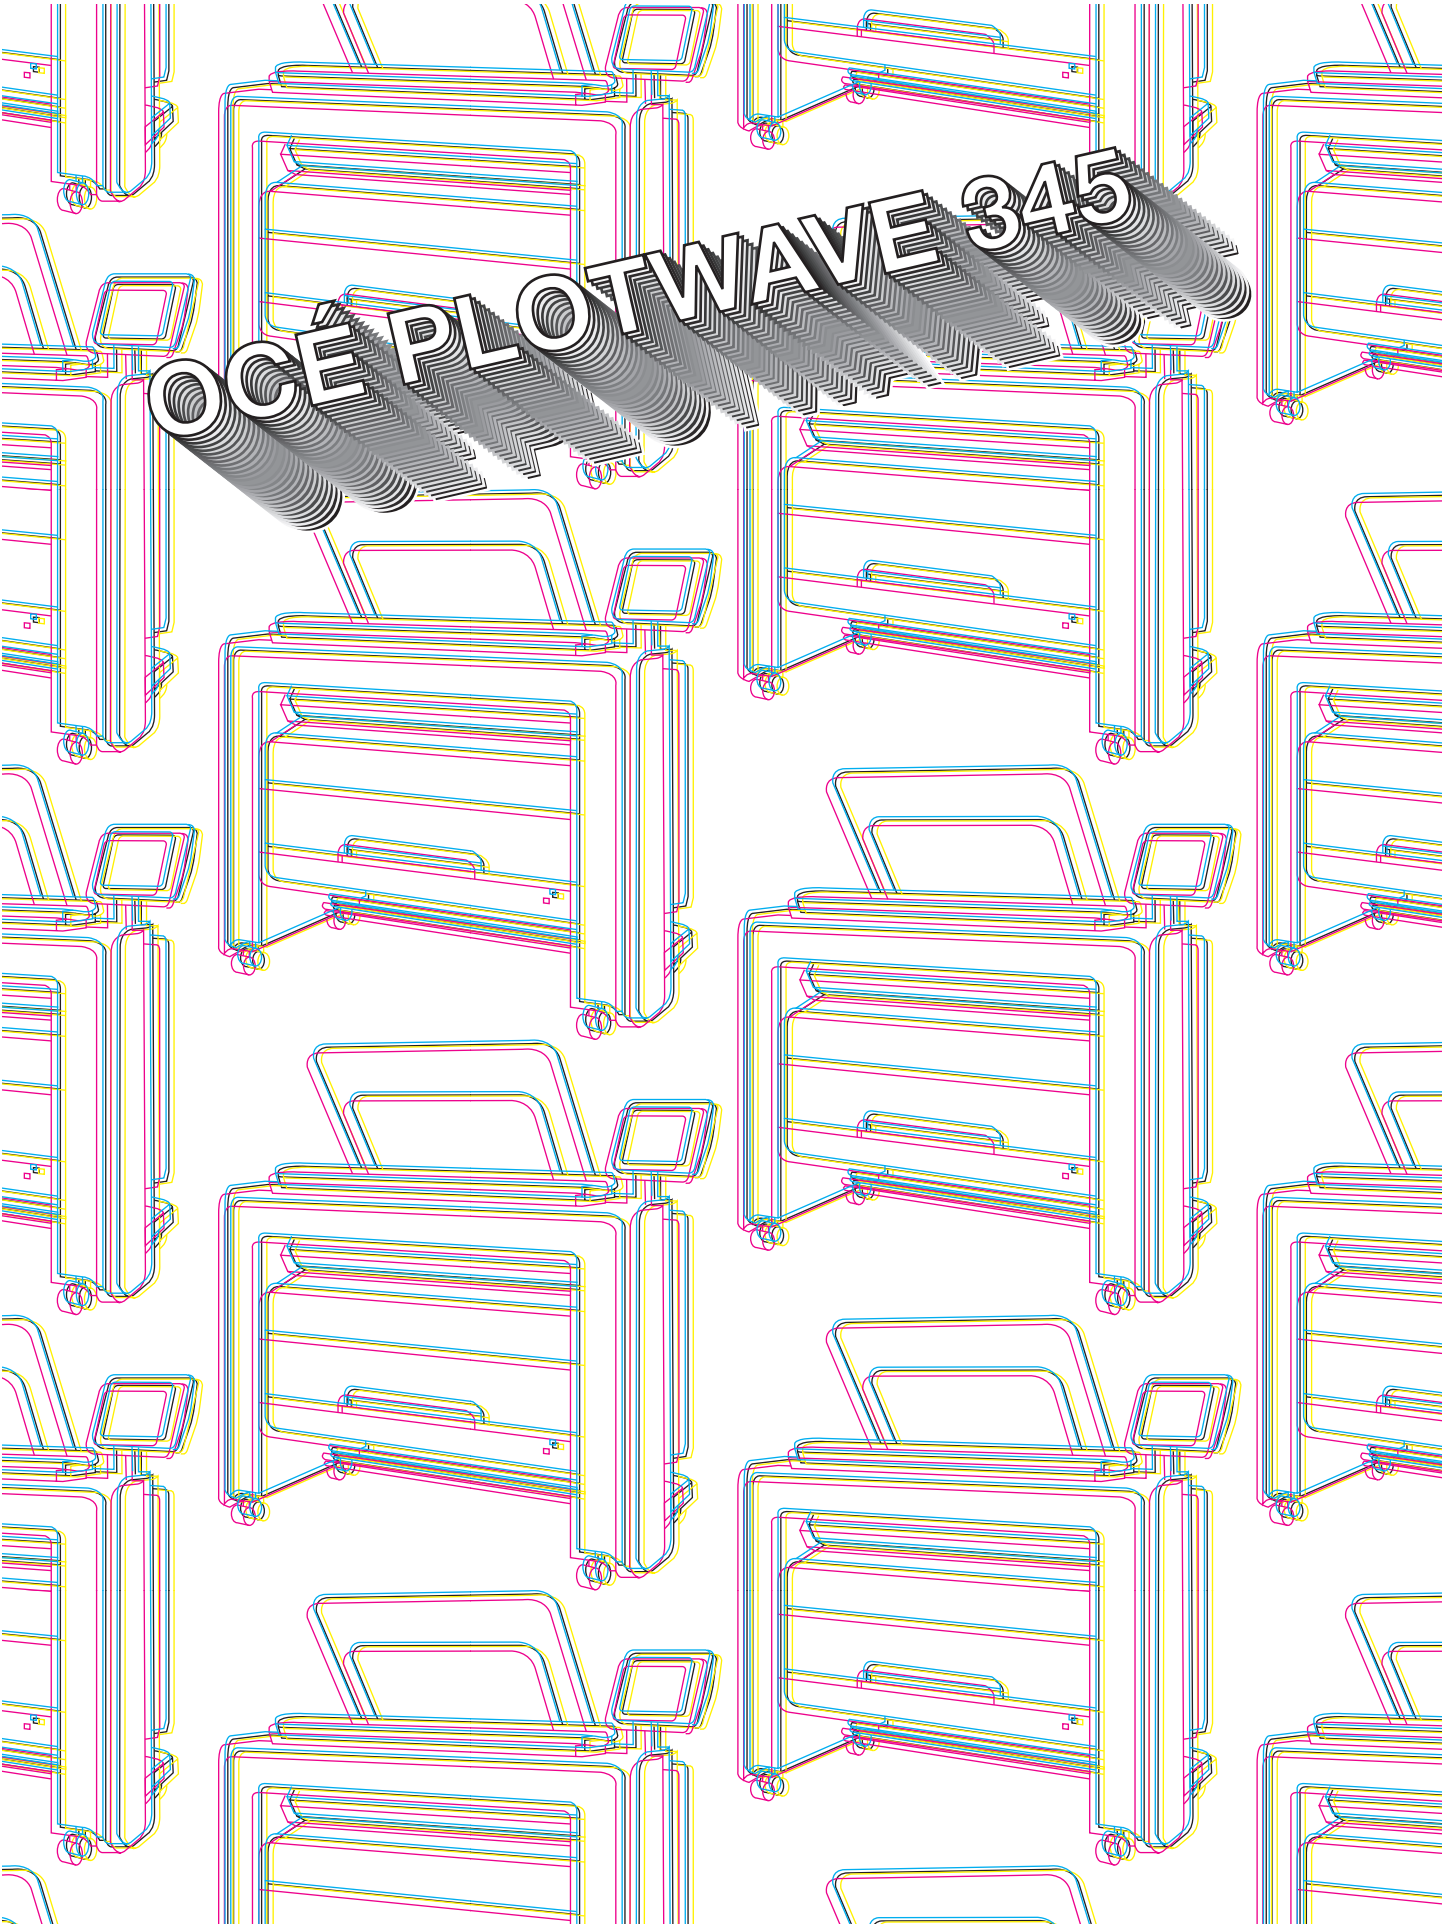

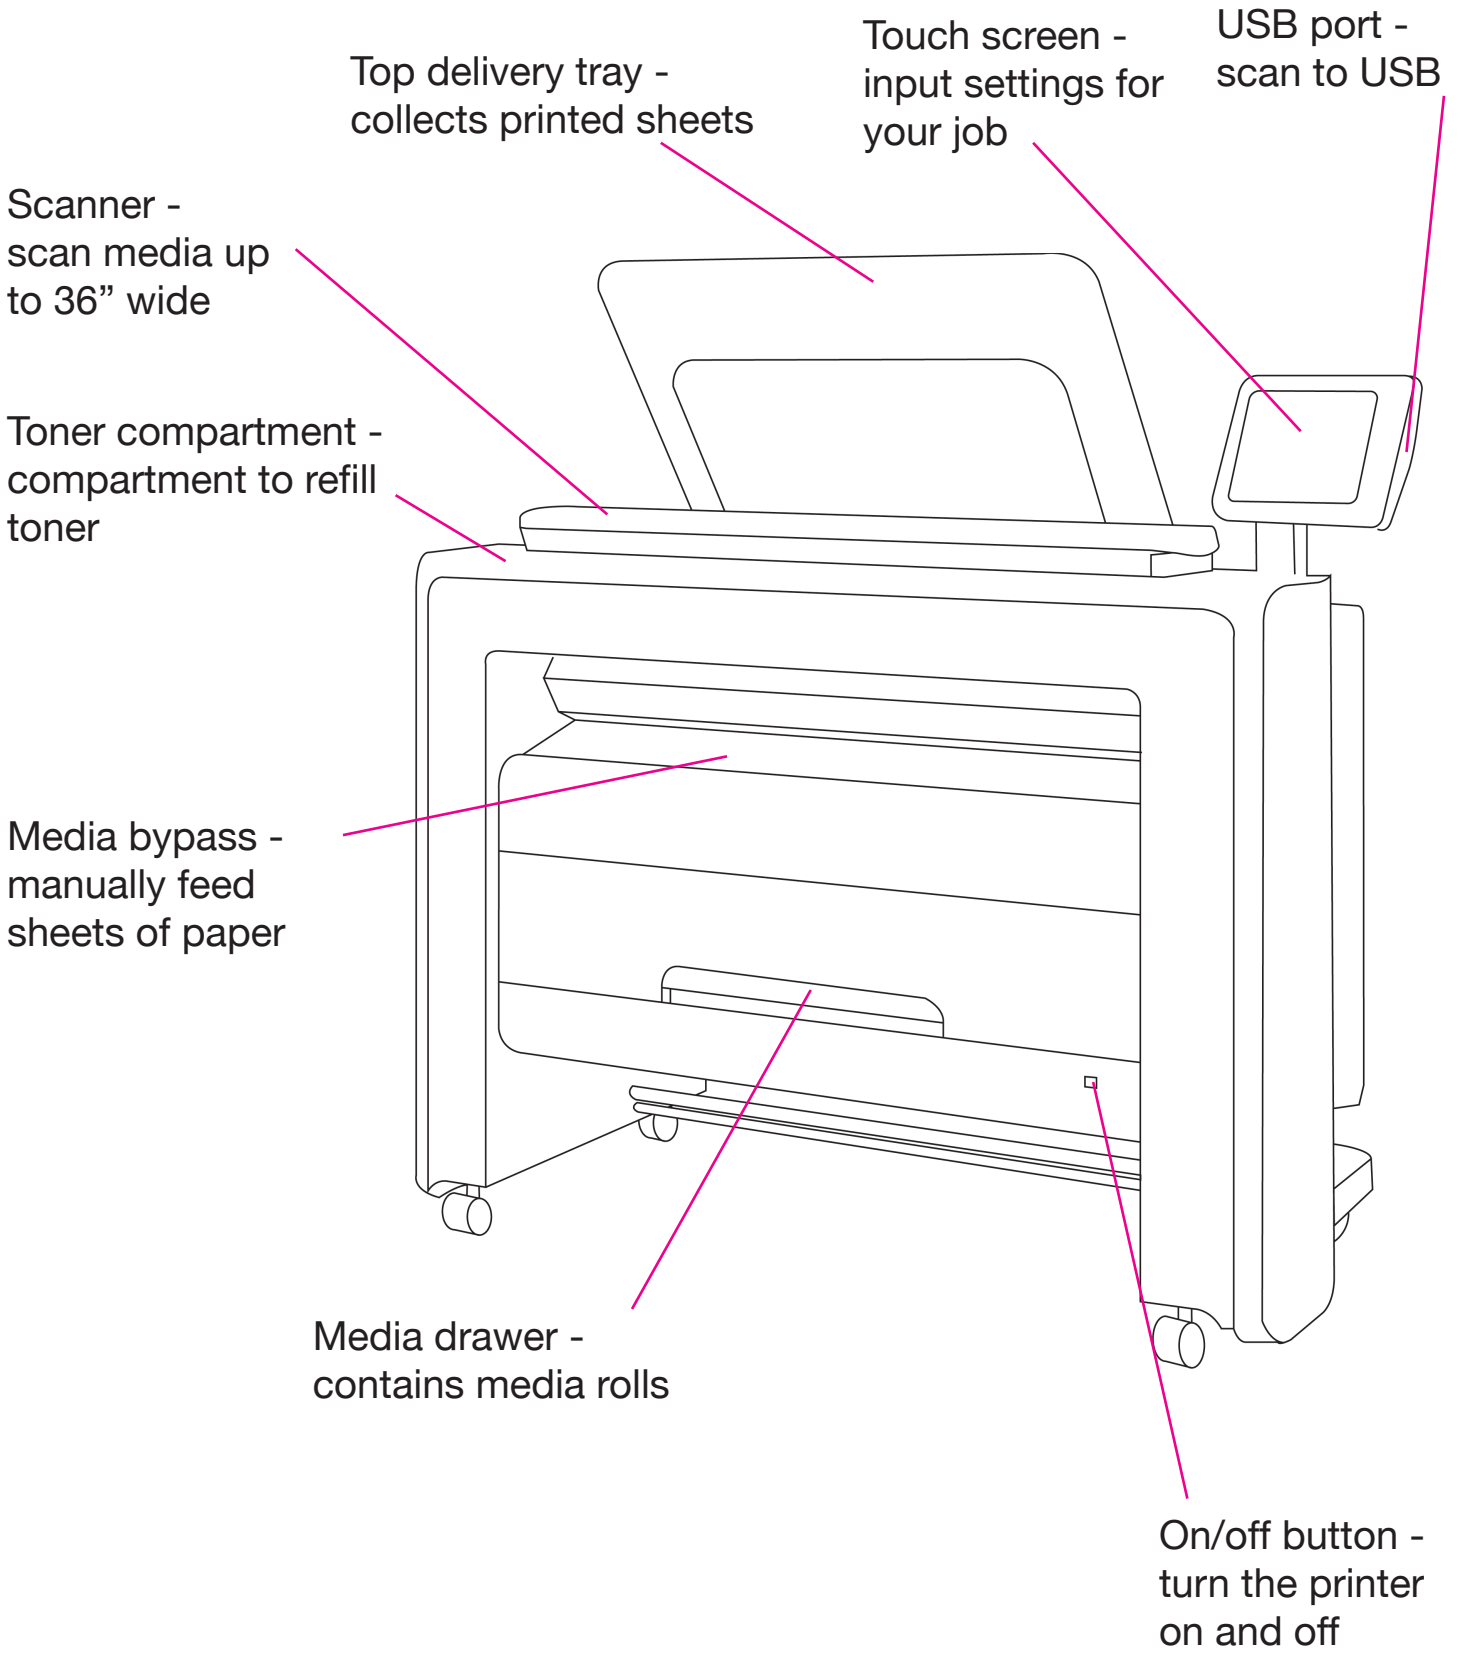


P R I N T I N G

When your file is ready to print, go to File and then Print.


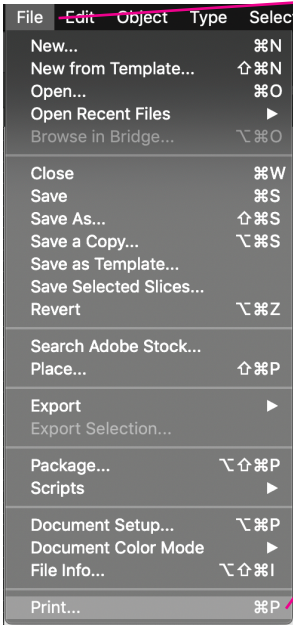


Select Océ PlotWave 345 from the printer menu and then select page setup.

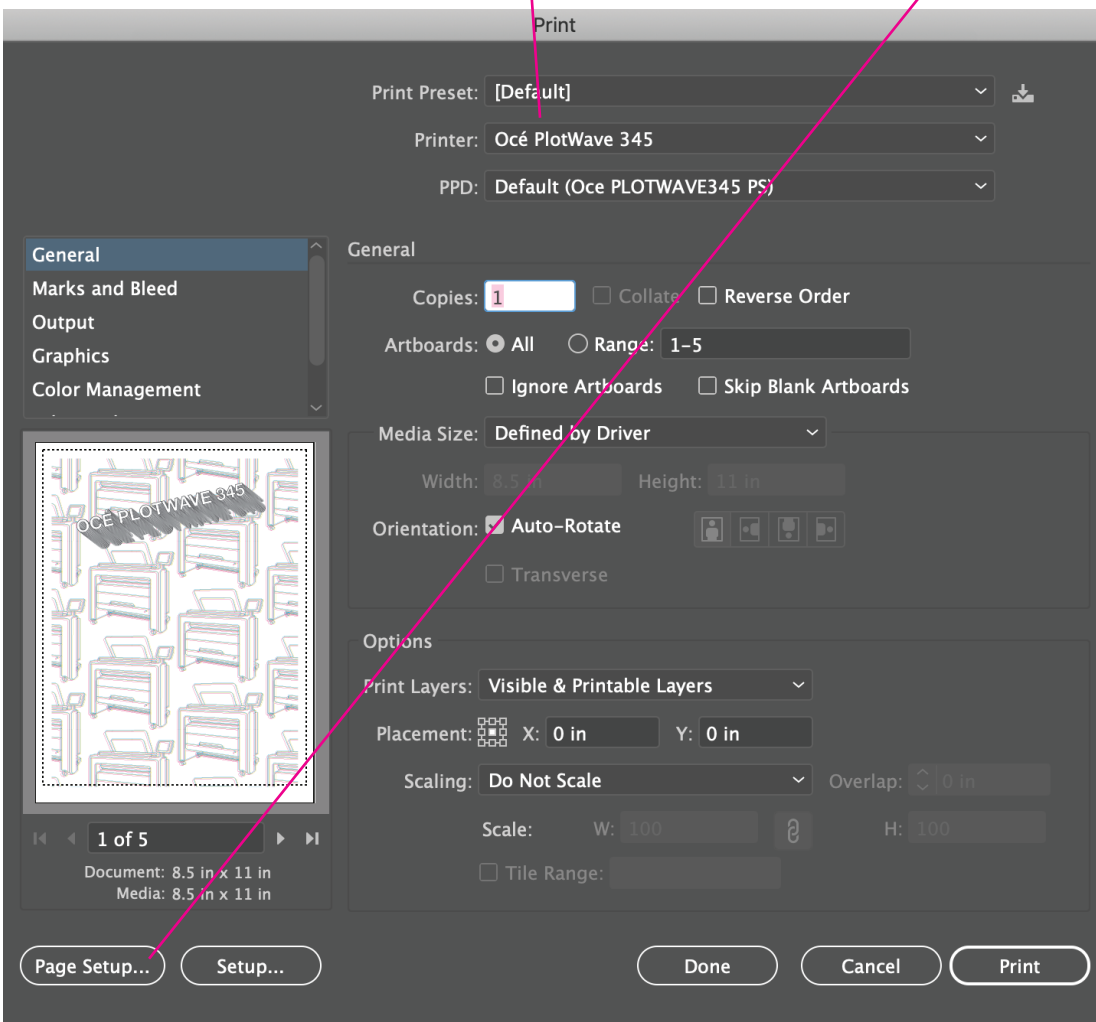


PRINTING CONT.


Select Manage Custom Sizes... from the Paper Size menu.

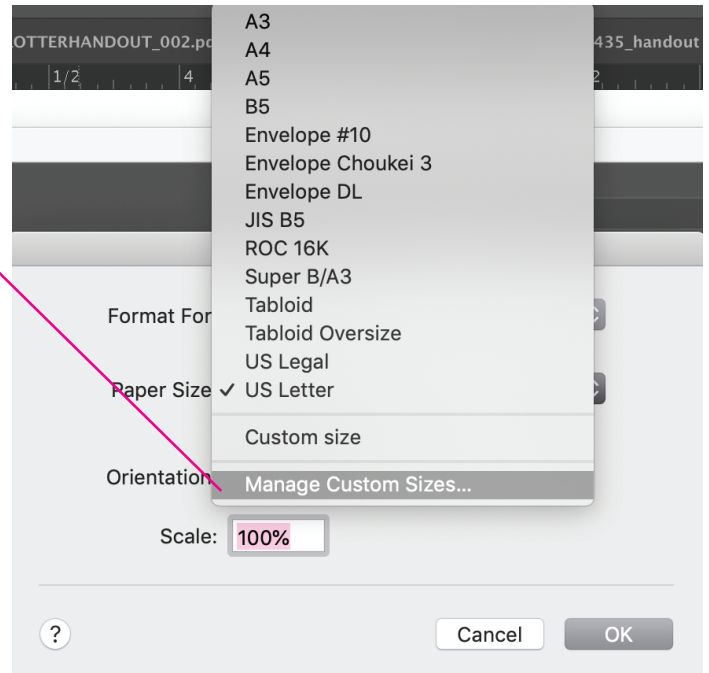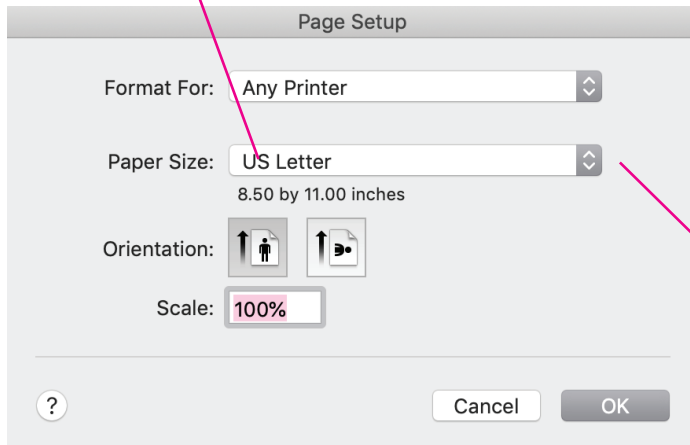

Input the correct height of your print; the width will always be 36". Press OK.

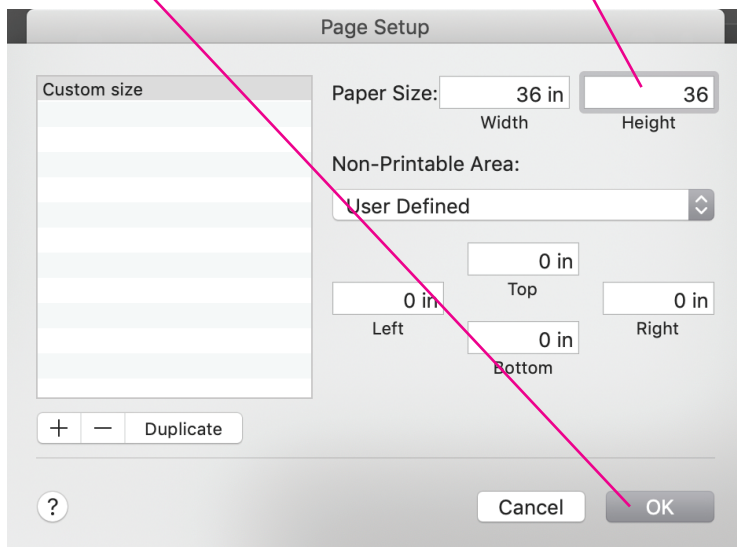


 When everything looks good and your settings are correct, press Print.

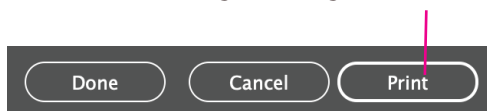


S C A N N I N G

Insert your USB into the USB Port
On the Touch Screen, press Scan.

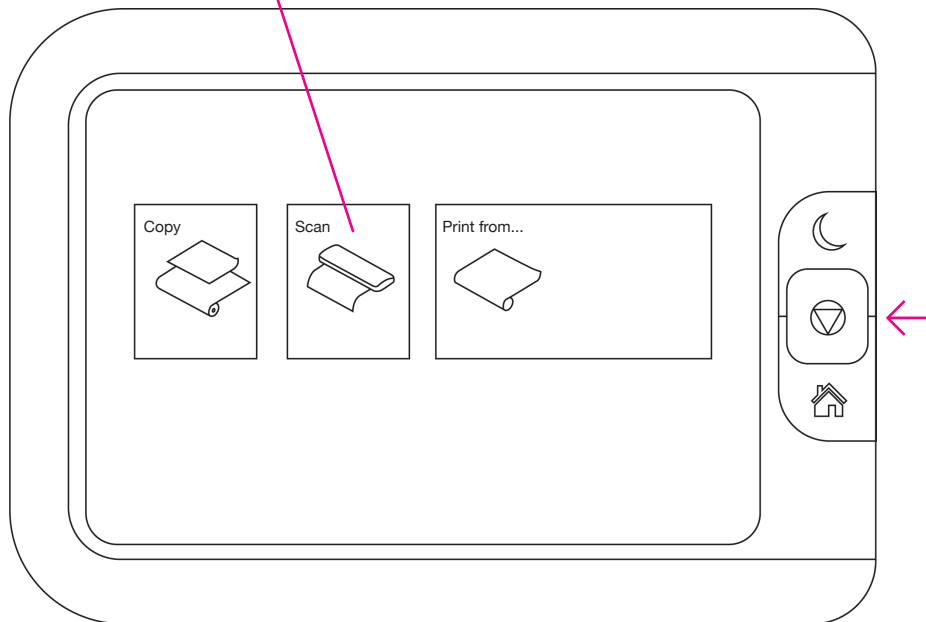


Press USB.

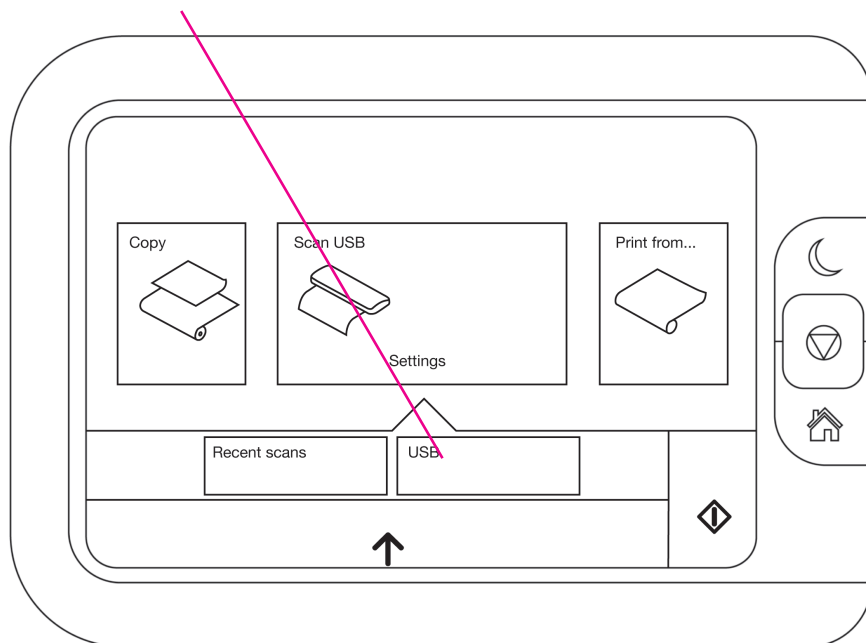

SCANNING CONT.

Adjust the following settings as needed.

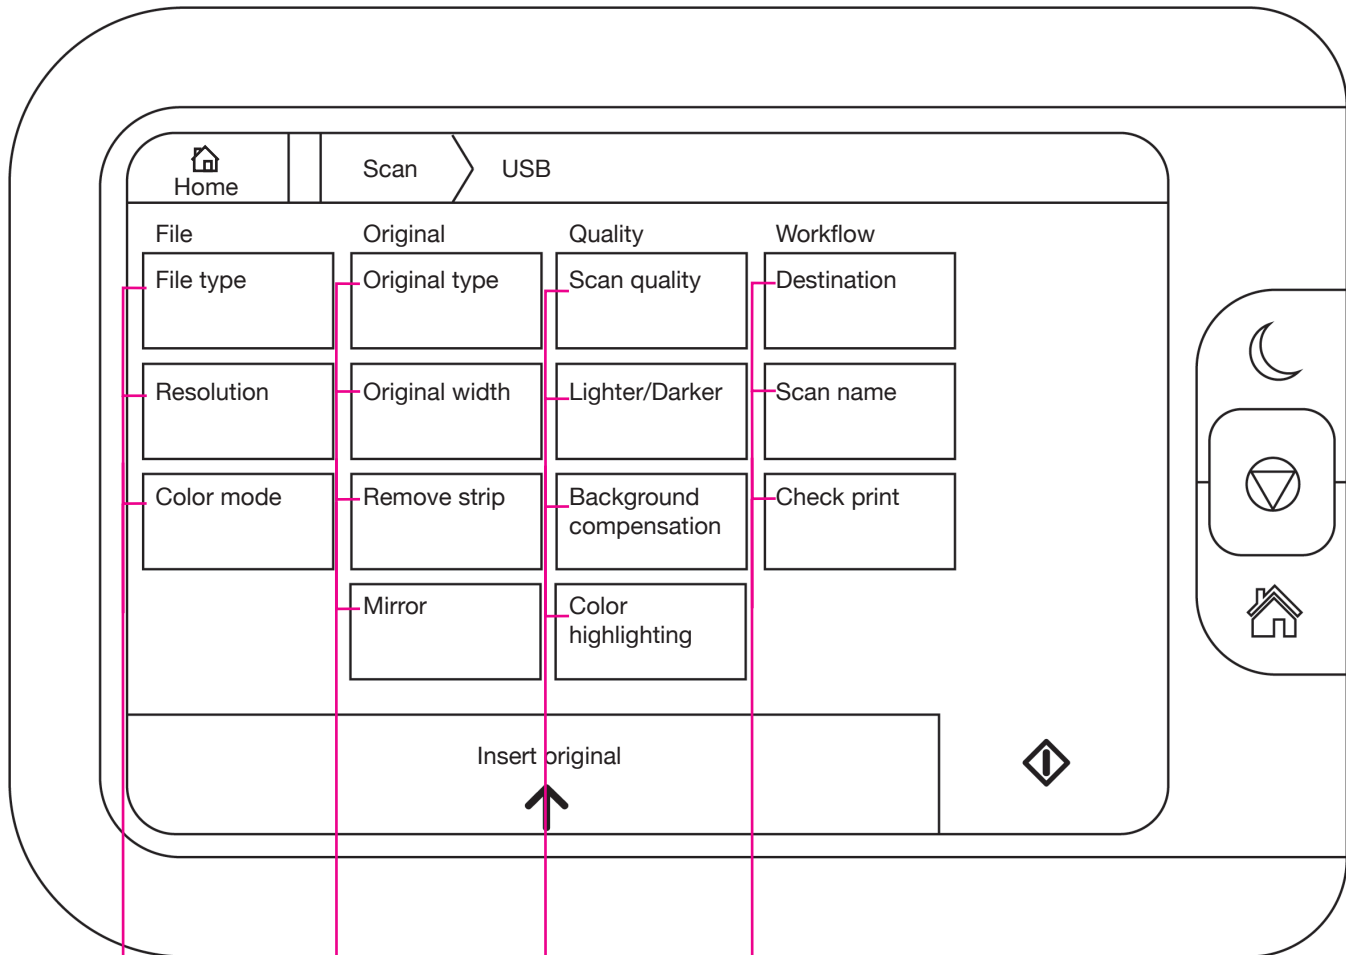

File type - sets file format

Resolution - adjusts DPI

Color mode - adjusts color, greyscale, or b/w

Original type - designates what the original document is

Original width - adjust how the scanner reads the width

Remove strip - allows you to erase portions of the scan

Mirror - flip image along the vertical axis

Scan quality - define quality of the scan

Lighter/Darker - define lightness and contrast of scan

Background compensation - reduces background noise

Color highlighting - can emphasize colors

Destination - sets location of where to scan

Scan name - names your file


Check print - makes a print of your scan

When your settings are correct, insert your document into the scanner. The scanner will grab the document and prompt you to press scan. Press scan to scan your document.


LOADING MEDIA

Make sure the printer is turned on.

Open the media drawer and gently roll the media back onto itself.

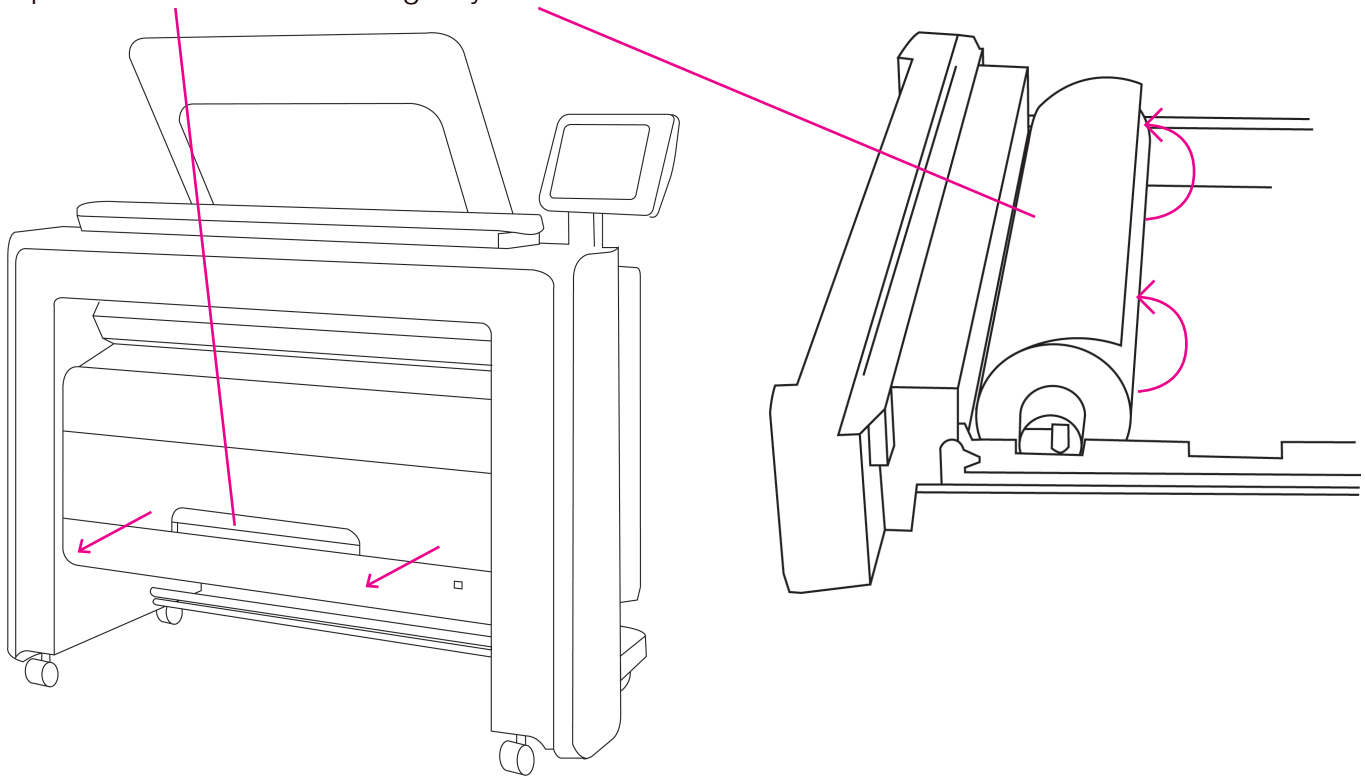


Lift roll up and out of drawer, and place on the loading station.

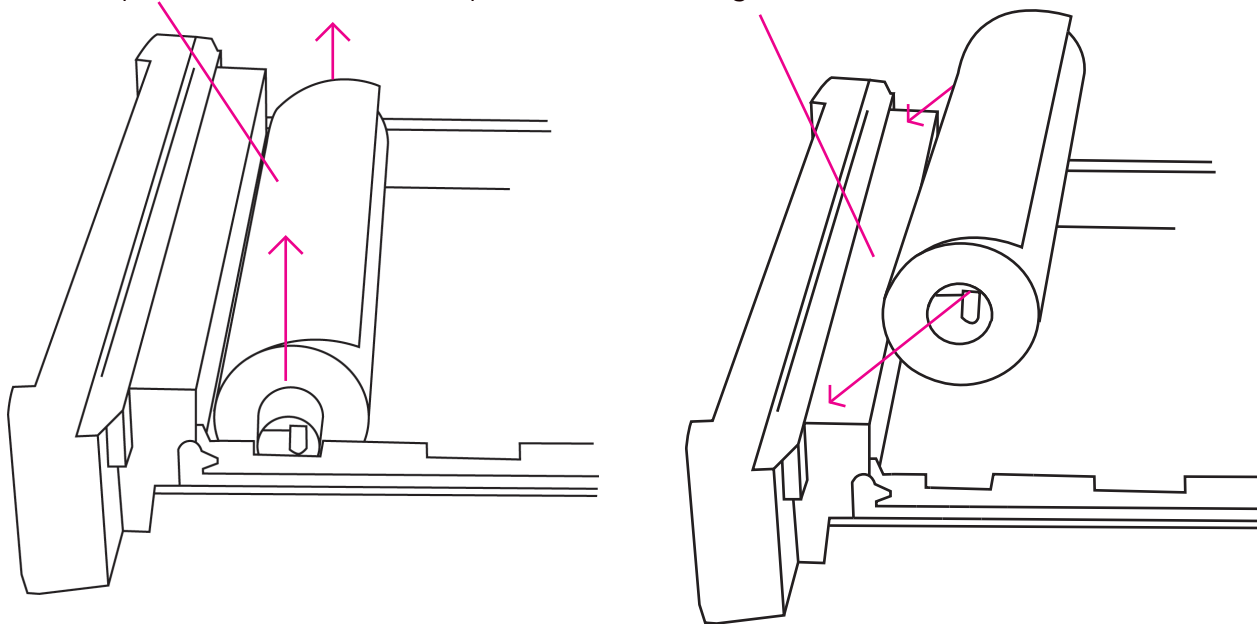


LOADING MEDIA CONT.


Squeeze the roll holder locking mechanism and slide the roll holder out of the media.
Store media in a safe place.

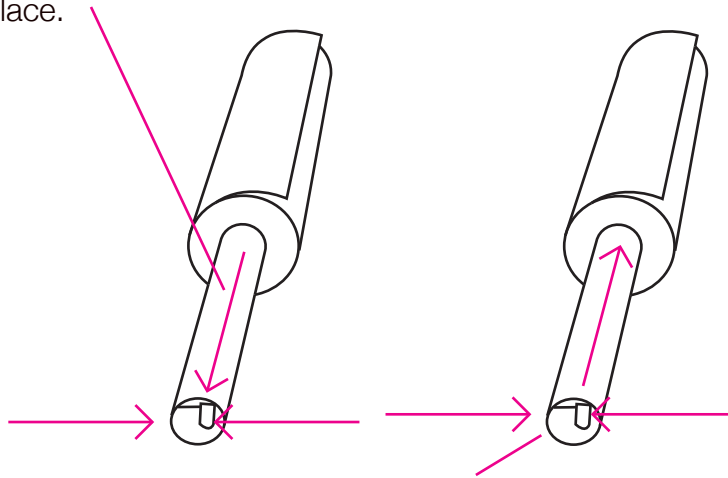

Engage the locking mechanism on the roll holder and slide it into your media.
Make sure that the media holder is at the correct width of your media.
Place the media back into the drawer.

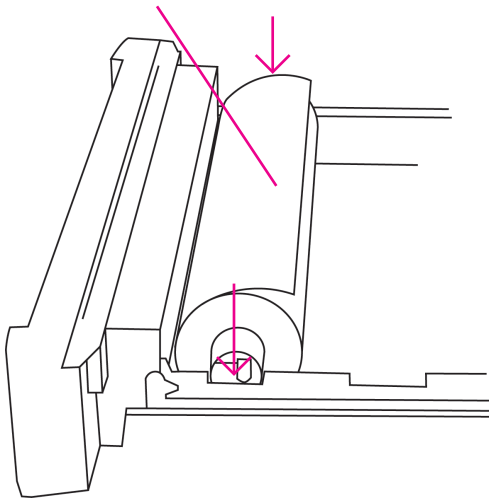

Gently roll the media so the edge feeds under the roll and into the paper guide.
The printer should automatically grab the roll.

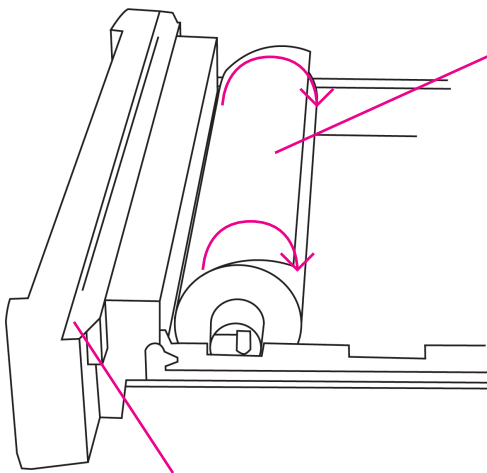

If needed, press the cut paper button to trim the roll.

Gently close the media drawer and make sure your media matches the settings on the touch screen.